


INSTRUCTIONS

SSAK4 and SSAK450 GIZZARD PEELER

WARNING

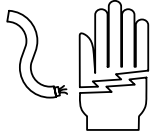

Be sure Power Cord Assembly is not connected when installing or cleaning. Do not defeat electrical ground afforded by 3-prong Cord Assembly. Power Cord Assembly and the peeler itself should only be repaired by a qualified electrician. Failure to follow these safety precautions could result in electrical shock causing serious injury or death!

READ ALL DIRECTIONS CAREFULLY BEFORE BEGINNING INSTALLATION

ASSEMBLY AND OPERATING INSTRUCTIONS

- STEP 1:** Check to make sure all parts are received. You should receive the gizzard peeler and 3 legs.
- STEP 2:** Carefully inspect the specification plate. The plate will indicate if the unit is 110 volt, 60 cycle; 220 volt, 60 cycle; or 220 volt, 50 cycle. Make sure your electrical connection is compatible with the description on the specification plate.
- STEP 3:** Attach three legs. Legs come from manufacturer in only one length.
- STEP 4:** Connect the 6 foot long (1.83 m), one quarter inch (.64cm) braided hose to your water source. Usually the water source can be the evisceration trough water source.
- STEP 5:** Connect to your electrical source. DO NOT WIRE DIRECT.
- STEP 6:** Push one of the gray buttons. The rollers should rotate toward each other. If the rollers do not roll toward each other, turn peeler off by pushing the first gray button you pushed -- then push the second gray button. Restart Peeler.

THE PEELER WILL NOT REVERSE WHILE IN OPERATION.

- STEP 7:** Here are some other pointers:

Before you peel a gizzard, you need to split it with a knife or with a hack saw blade. You might want to permanently mount the blade or the knife horizontally -- sharp side up. BE CAREFUL!

Do not use gloves with your peeler.

If peeler is not peeling well, slightly tighten 2 bolts at end of peeler head pushing the ball bearing against the roller. This will tighten the rollers.

Spray pipes should spray water against bottom side of rollers--not on top of the rollers. Gizzards should not float on water on the rollers.

MODEL NUMBER

The MODEL NUMBERS are: SSAK4 Gizzard Peeler and
SSAK450 Gizzard Peeler (50 cycle)

The Gizzard Peeler Head only is Model No. HAK4.

The Peeler Rolls only -- Model No. RAK4.

HOW TO ORDER PARTS

Repair parts may be ordered from Brower.